



Airbag diagnostics - Ford

Ford airbag (SRS) systems in Fiesta, Escort, Mondeo and certain Scorpio models do not support serial diagnostics. If a fault is detected in the SRS, the SRS warning light in the instrument cluster will light up when the engine is running. To assist troubleshooting, the SRS warning light will blink according to a certain sequence.

Code	SRS warning light blink sequence	Fault description
0	On for 5 seconds, then off	No fault present — normal operation
1	On for 5 seconds, then one flash every 2 seconds.	Driver airbag failure
2	On for 5 seconds, then 2 flashes every 2 seconds.	Passenger airbag failure
3	On for 5 seconds, then 3 flashes every 2 seconds.	Driver and passenger airbag failure
4	On for 5 seconds, then 4 flashes every 2 seconds.	Pretensioner failure (driver or passenger side)
5	Always on	SRS electronic control module failure or supply fault
6	Always off	Bulb or instrument cluster fault