

This diagnostic software can test for USA Ford ECUs, including: Engine, Automatic transmission, Anti-lock brake, Airbag, Air Conditioning, Dashboard, Anti-theft, Cruise, Common electronics, Seats, Light, etc.

**USA Ford model coverage:**

Aspire	BONGO FRIENDEE	
B515	BT-50	Bantam
Blackwood	Bronco	CF/LCF
Cargo	Continental	Contour
Cougar	Courier	Crown Victoria
E-Series	E-Series Shuttle Bus	
EcoSport	Econovan	Edge
Endeavour	Escape	Escort
Everest	Excursion	Expedition
Expedition EL	Explorer	Explorer Sport
Explorer SportTrac	F-Series	Famila
F-Series Super Duty		FIGO
Fairmont	Falcon Forte S	Festiva
Festiva Sedan	Fiesta	Five Hundred
Flex	Focus	Focus C-MAX
Ford GT	Freestar	Freestyle
Fusion	Futura / XR / XT	Galaxy
Granada	Grand Marquis	Ikon
KA	Kuga	LASER
LS	Liata	MKS
MKT	MKX	MKZ
Marauder	Mariner	Mariner Hybrid
Mark LT	Mark VIII	Maverick
Milan	Mondeo	Montego
Monterey	Mountaineer	Mustang
Motorhome / Stripped Chassis / Step Van		
Mystique	NOVO KA	Navigator
Navigator L	Puma	Ranger
S-Max	Scorpio	Street Ka
Tierra	TX5 Bravo	Taurus
Taurus X	Telstar	Telstar - AY

Territory	Thunderbird	Town Car
Tracer	Transit	Tribute
Transit Connect/Tourneo Connect		Villager
Windstar	Zephyr	

### **Basic Functions:**

- Reading ECUs
- Reading DTCs[Diagnostic trouble code]
- Clearing DTCs[Diagnostic trouble code]
- Reading vehicle running data
- Vehicle component operation test

### **Special Functions:**

- ※ Programmable module installation (program after replacing ECU).
- ※ ESP sensor calibration.
- ※ Special functions for primary modules:
  - PCM [Powertrain control module] or ICM [Instrument control module]:
    - ▲ Passive anti-theft function (Program additional ignition key, ignition key code erase and program setting, Customer Spare Key Programming Enable/Disable, reset parameters, unlimited key mode ON/OFF, Program Unlimited Key Code)
    - ▲ Factory keyless entry code
    - ▲ Remote keyless entry
    - ▲ Keyless entry keypad code reset
    - ▲ Remote start
    - ▲ Power balance
    - ▲ KAM[Keep alive memory] reset
    - ▲ Diesel particle regeneration system (DPF parameter reset, DPF regeneration stop, DPF manual regeneration)
    - ▲ Reset/clear specific functions

- ▲ SCR[Selective catalytic reduction] system function (SCR system Emptying,SCR system refilling Activation, SCR parameter reset, SCR visual leak check, SCR Dosing measurement test)
- ▲ IQA[Injector Quantity Adjustment]
- PCM [Powertrain Control Module] or TCM [Transmission Control Module]:
  - ▲ Automatic transmission (clear transmission adaptive tables, stop use of transmission adaptive learning, halt transmission adaptive learning,Resume transimission adaptive learning)
  - ▲ KAM[Keep alive memory] reset.
- ABS [Anti-lock Brake System]:
  - ▲ ABS service bleed
  - ▲ IVD Initialization Sequence.
- RCM [Restrain Control Module]:
  - ▲ Passenger Seat Weight Sensor ReZero.